U160 Time & Attendance Terminal

User Guide



Contents

- **I** Considerations
- II Abbreviated Operating Procedures
- **III Introduction to Fingerprint Recognition Technology**
- 1. User Management
 - A) Enrolling Users
 - **A1) Enrolling Fingerprints**
 - **B1) Enrolling Passwords**
 - C1) Enrolling Fingerprints and Passwords
 - B) Enrolling Administrators'
 - **B1) Enrolling Fingerprint**
 - **B2) Enrolling Password**
 - **B3**) Enrolling Fingerprints and Passwords
 - C) Enrolling Cards
 - C1) Create PINCard
 - **C2) Enrolling FPCard**
 - C3) Create FPCard
 - C4) Register FPCard
 - C5) Unregister FPCard
 - **C6) Empty FPCard**
 - C7) Dump FPCard
 - **C8) Move to FPCard**
 - D) Delete
- 2. Changing Date and Time
- 3. Changing Date Format
- 4. Advanced Settings

- A) Resetting U160
- **B)** Deleting Attendance Logs
- C) Clear All Data
- D) Clear Administrators' privileges
- E) Show Score
- F) 1:N Fingerprint Matching Threshold
- **G) Must Input ID**
- H) 1:1 Fingerprint Matching Threshold
- I) Voice
- J) Card Only
- H) FPCard Key
- I) Update Firmware
- J) Button Beep
- K) Adjust Volume
- 5. Power Management
- **6** Communications Options
 - A) Network Connectivity
 - B) RS 232/485 Serial Connectivity
- 7 Log Options
- 8 Auto Test
- 9 PenDrive (flash drive) Management
- **10** System Information
- 11 Maintenance

Basic Concepts

This section explains and describes the functions and options of enrolling the users;

- User Enrollment/Verification
- Match Threshold Levels
- User ID Numbers
- Authority (Status) Levels

The two most important functions are user enrollment and user verification.

User Enrollment/Verification

Enrollment is the process of associating an ID number to the user's finger/s to create a template. This template is stored in the memory of U160 for future verification.

During user verification, the stored template is compared to the current fingerprint scan to confirm the user's identity.

The enrollment process takes approximately 2-4 seconds.

Up to ten fingers can be enrolled for the same ID number, so the user may have more verification options.

Ideally, we recommend enrolling one finger from each hand so that in case of injury to one hand, the user can use the finger from the other hand as a backup. It is recommended to enroll either index fingers and/or middle fingers.

For users with extremely thin fingers, we recommend to enroll the thumb. For users whose fingers are difficult to enroll or cannot be enrolled, we recommend to enroll the password along with fingerprint.

Match Threshold Levels

The Match Threshold is the degree to which a verification is performed to ensure that the user is who he/she claims to be.

The Match Threshold Levels establishes a balance between False Acceptance Rate (FAR) and False Rejection Rate (FRR). FAR measures how often a non-authorized user is falsely recognized and granted access to the system. FRR measures how often an enrolled and authorized user, who should be granted access to the system, is denied on the basis that the system did not recognize him/her.

Note that you <u>cannot</u> set match threshold levels on a <u>per user</u> basis. The **threshold-setting is universal**, for the ENTIRE user-population.

If too many users are experiencing difficulty having his/her fingerprint(s) read, we recommend using 1:1 matching (i.e. User first enters his/her User ID, and then places his/her finger on the sensor for verification).

Raising the threshold increases security, while lowering it increases throughput. Based on the quality of the fingerprints of the users, you need to strike a correct balance.

So if too many users have fingerprint(s) having difficulty being read, the match threshold level can (and should) be reduced.

Table 1—1 Suggested Match Threshold Settings

FRR	FAR	One-to-many	One-to-one
High	Low	45	25
Middle	Middle	35	15
Low	High	25	10

User ID Numbers

Each fingerprint is assigned a unique User ID Number. This ID number is used to call up the fingerprint template from the U160 database, each time the verification is requested. ID numbers can also be called up via the keypad or RF card

Authority (status) Levels

The U160 has four authority or status levels;

1. Users

People whose identity must be verified prior to having his/her attendance recorded. Users have no administrative privileges.

2. Enrollers

People who are authorized **ONLY** to **enroll** new users or delete users from the system.

3. Administrator

People who can perform other operations, except set advanced options and enroll administrators.

4. Supervisors

People who have access to **ALL** functions.

Note:

Until an actual Administrator is enrolled in the system, any user can access the Menu System.

Start-up window

Plug the power adaptor to the main power supply or hit the Power button on the keypad and the following "startup window" appears on the U160.



Note:

The actual current date/time will appear.

Enrollment and Verification Procedures

This section describes how to enroll and verify users on the U160.

Note:

You normally must have Enroller, Administrator, or Supervisor status to enroll users. But until an Admin is enrolled, all users have access to all the menu functions.

Enrolling Users

The first "enroller" with a new U160 will have the capability of enrolling other users. If you will be the administrator of the U160, be sure to select "Administrator" when enrolling your fingerprint(s)".

There are three modes of enrollment;

- 1. Fingerprint enrollment
- 2. Password enrollment
- 3. Fingerprint & password enrollment

The type of enrollment to be selected depends on the environment and how easily the users' fingerprints can be read by the U160.

Fingerprint enrollment should be used when the majority of users' fingerprints can be read. This is typical of most office environments.

Password enrollment should be used for users who <u>cannot</u> be enrolled nor verified by his/her fingerprint. It is not uncommon to have some users whose fingerprints are simply too difficult for the U160 to read.

Fingerprint & Password enrollment allows users' fingerprint(s) AND password to be registered together, at the same time. Otherwise, these are normally 2 separate operations.

User Management

The User Management menu allows you to enroll and delete users and his/her respective fingerprint(s) and password. Some U160 models can also enroll/verify Prox, HID and Mifare cards (aka PIN/FP cards);

Enroll User

Enroll fingerprint
Enroll Password
Enroll Fingerprint and Password

FPCard Management

Create PINCard Enroll FPCard Create FPCard Register FPCard Unregister FPCard Empty FPCard Dump FPCard Move To FPCard

Enroll Admin

Enroll fingerprint
Enroll Password
Enroll Fingerprint and Password

Delete

Enroll Users

Users (not including Admins, Supervisors or Enrollers) have NO "administrative" access to the U160.

Note:

Until an actual "Administrator" is enrolled in the U160, ALL "users" enrolled on the U160 DO "temporarily" have administrative access. Therefore it is important to enroll an "administrator" on the U160 soon after initial installation.

"Users" can enroll with three methods;

 
- Fingerprints
- Passwords
- Fingerprints and Passwords

Enroll Fingerprint (for Users)

To start Fingerprint enrollment, press the **MENU** key on the U160.



Scroll with the ▲/▼ keys and place the cursor (►) alongside User Manage



Press the **OK** key.

 


Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Enroll User.




Press the **OK** key.

Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Enroll FP.



Press the **OK** key.

 The U160 will prompt you;




If this is a NEW User, then press **OK**.

If you are enrolling an <u>additional</u> fingerprint to an <u>existing</u> user on the U160, then press the **ESC** key, instead.



Note:

 
If you press **ESC**, the U160 will prompt you for the existing User's ID number;



Note:

The U160 allows you to add up to 9 "backup" fingers for any of the users.

 In this first example we'll assume we're enrolling a fingerprint for a NEW user to the U160.



Since we are enrolling a New User, press **OK**

The U160 will then prompt you with the next available User ID;



In this example, no user has yet been enrolled on the U160. So the next available User ID# is 00001.


Press the **OK** key to accept <u>00001</u>, or manually key in a different number if desired.

The U160 will then prompt;

New Enroll 00001-0 Place Finger . . . ESC/Exit

Remember the rules for proper finger placement;

The user's finger should completely cover the sensor. The finger should be placed flat and in the center of the sensor. The finger should cover at least 80% of the sensor as shown below:

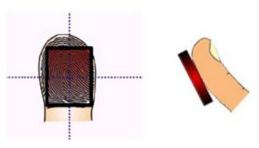

The finger should NOT be placed in the following positions:

Not flat

Not centered

Not centered

Not centered

Place your finger on the sensor for a full 2 seconds.



After the U160 scans your fingerprint successfully, it will "beep" and then prompt you briefly with;

 
New Enroll 00001-1 Remove Finger ESC/Exit

Then you'll be prompted;

New Enroll 00001-1 Second Press ESC/Exit


Remove your finger, and then place your finger on the sensor a 2^{nd} time. Again, you'll be prompted briefly;

New Enroll 00001-1 Remove Finger ESC/Exit Remove your finger, and then place your finger on the sensor a 3rd and final time. You'll then be prompted;



Press the **OK** key to accept the newly enrolled

 finger. The U160 will then prompt you with;




UserID <u>0001</u> has now been successfully enrolled with <u>one</u> fingerprint.

If you wish to continue enrolling additional <u>users</u>, press the **OK** key and follow the same procedures.

If you're finished enrolling additional users, press the **ESC**

 key. When pressing **ESC** the U160 will prompt you;




If you wish to add a "backup finger" for UserID <u>00001</u> press the OK key.

Note:


Ideally, we recommend enrolling one finger from each hand so that in case of injury to one hand, the user can use the finger from the other hand as a backup. It is recommended to enroll either index fingers and/or middle fingers.

After enrolling one or more fingerprints for UserID <u>00001</u> press the **ESC** key.

 
You'll note pressing the **ESC** key takes you back to the previous menu;



Press **ESC**

 

Press **ESC**

 

Continue pressing the **ESC** key until you return to the Start-Up window;



Note:

The actual current date/time will appear.

Test the newly enrolled fingerprint by having UserID $\underline{0001}$ place his/her finger on the sensor.

If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;



Note:

The U160 will make a note in its transaction log that User ID <u>0001</u> accessed the U160. This information can be used for Time & Attendance software applications.

 
Enroll Password (for Users)

Password Enrollment should be used for those few users whose fingerprints cannot be read by the U160's fingerprint sensor.

To start Password enrollment, press the **MENU** key on the U160.




Scroll with the ▲/▼ keys and place the cursor (►) alongside User Manage



Press the **OK** key.

 
Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Enroll User.



Enroll Admin


Press the **OK** key.

 Scroll with the ▲/▼ keys and place the cursor (►) alongside Enroll Pwd.



Press the **OK** key.

 The U160 will prompt you;



If this is a NEW User, then press **OK**If you are adding/changing a password for an existing user on the U160, then press the **ESC** key.

 


Note:

If you press **ESC**, the U160 will prompt you for the existing User's ID number;



In this first example we'll assume we're enrolling a password for a NEW user.



Since we are enrolling a New User, press **OK**

 
The U160 will then prompt you with the next available User ID;



In this example, no user has yet been enrolled on the U160. So the next available User ID# is <u>00001</u>.


Press the **OK** key to accept 00001, or manually key in a different number if desired.

The U160 will then prompt;




Enter a 4-digit password and then press the **OK**

 key. The U160 will prompt you;




Enter your chosen 4-digit password again.

 Then press the **OK** key. The U160 will then prompt you;



 Press the OK key. The U160 will then prompt you;




If you'd like to enroll a password for a <u>new</u> user, then press **OK**.


If you'd like to change a password for an existing user, then press ESC

Follow the same procedure described above for adding/changing passwords.

 
You'll note pressing the **ESC** key takes you back to the previous menu;



Press **ESC**

 

Press **ESC**

 

Continue pressing the **ESC** key until you return to the Start-Up window;



 
Note:

The actual current date/time will appear.

Test the newly enrolled password;

At the start-up window, have User ID <u>0001</u> **FIRST** enter his/her User ID number and **THEN** press the **OK** key.

After entering <u>1</u> and pressing **OK** the U160 will prompt;



Now enter the password created by User ID <u>0001</u> and then press **OK** If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;



Note:

The U160 will make a note in its transaction log that User ID <u>0001</u> accessed the U160. This information can be used for Time & Attendance software applications.

Enroll Fingerprint & Password (for Users)

 
Note:

You can enroll users with both a fingerprint AND a password in the same step.

To start Fingerprint AND Password enrollment, press the **MENU** key on the U160.




Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside User Manage



Press the **OK** key.




 Scroll with the ▲/▼ keys and place the cursor (►) alongside Enroll User.




Press the **OK** key.

 Scroll with the ▲/▼ keys and place the cursor (►) alongside FP & Pwd.



Press the **OK** key.

 The U160 will prompt you;




If this is a NEW User, then press **OK**

If you are enrolling an <u>additional</u> fingerprint to an <u>existing</u> user on the U160, then press the **ESC** key.



Note:

 
If you press **ESC**, the U160 will prompt you for the existing User's ID number;



Note:


The U160 allows you to add up to 9 "backup" fingers for any of the users.

 In this first example we'll assume we're enrolling a fingerprint AND password for a NEW user to the U160.



Since we are enrolling a New User, press **OK**

 The U160 will then prompt you with the next available User ID;



In this example, no user has yet been enrolled on the U160, so the next available User ID# is <u>00001</u>.


Press the **OK** key to accept <u>00001</u>, or manually key in a different number if desired.

The U160 will then prompt;



Remember the rules for proper finger placement;

The user's finger should completely cover the sensor. The finger should be placed flat and in the center of the sensor. The finger should cover at least 80% of the sensor as shown below:

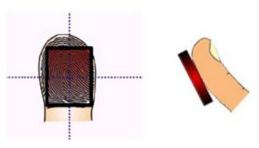

The finger should NOT be placed in the following positions:

Not flat

Not centered

Not centered

Not centered

 
Place your finger on the sensor for a full 2 seconds.



After the U160 scans your fingerprint successfully, it will "beep" and then prompt you briefly with;




Then you'll be prompted;




Remove your finger, and then place your finger on the sensor a 2^{nd} time. Again, you'll be prompted briefly;

 New Enroll 00001-1 Remove Finger ESC/Exit Remove your finger, and then place your finger on the sensor a 3rd and final time. You'll then be prompted;




Enter a 4-digit password and then press the **OK**

 key. The U160 will prompt you;




Enter your chosen 4-digit password again.

 Press the OK key. The U160 will then prompt you;



 
Press the **OK** key. The U160 will then prompt you;



If you'd like to enroll an additional new user, then press **OK**.

If you're finished enrolling additional users, press the **ESC** key.

 When pressing **ESC**, the U160 will prompt you;




If you wish to add a "backup finger" for UserID <u>00001</u> press the OK key.

Note:


Ideally, we recommend enrolling one finger from each hand so that in case of injury to one hand, the user can use the finger from the other hand as a backup. It is recommended to enroll either index fingers and/or middle fingers.

After enrolling one or more fingerprints to UserID <u>00001</u> press the **ESC** key.

 
You'll note pressing the **ESC** key takes you back to the previous menu;



Press **ESC**

 

Press **ESC**

 

Continue pressing the **ESC** key until you return to the Start-Up window;



Note:

The actual current date/time will appear.

Test the newly enrolled fingerprint by having UserID $\underline{00001}$ place his/her finger on the sensor.

If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;

 


Also test the newly enrolled password;



At the start-up window, have User ID <u>00001</u> **FIRST** enter his/her User ID number and **THEN** press the **OK** key.

After entering <u>1</u> and pressing **OK** the U160 will prompt;



Now enter the password created by User ID <u>00001</u> and then press **OK** If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;



Note:

The U160 will make a note in its transaction log that User ID <u>00001</u> accessed the U160. This information can be used for Time & Attendance software applications.

Enrolling Admins

"Admins" (non-Users) fall into 3 categories;

Enrollers:

People who are authorized **ONLY** to **enroll** new users or delete users from the system. No other U160 "system" functions are accessible.

Administrator:

People who can perform other operations, except set advanced options and enroll administrators.

Supervisors:

People who have access to ALL functions.

Note:

Until an actual "Administrator" is enrolled in the system, ALL "users" enrolled on the U160 "temporarily" have administrative access. Therefore it is important to enroll an administrator on the U160 soon after initial installation.

Admins can enroll with three methods;

 
- Fingerprints
- Passwords
- Fingerprints and Passwords

Enroll Fingerprint (for Admins)

To start Fingerprint enrollment, press the **MENU** key on the U160.




Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside User Manage



Press the **OK** key.




 Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Enroll Admin.



Press the **OK** key.

 Scroll with the ▲/▼ keys and place the cursor (►) alongside Enroll FP.



Press the **OK** key.

The U160 will prompt you;



Scroll with the $\blacktriangle/\blacktriangledown$ keys to choose the "authority status" of the Admin you are enrolling.

3 types of "Admins" to choose from;

Enrollers:

People who are authorized **ONLY** to **enroll** new users or delete users from the system. No other U160 "system" functions are accessible.

 
Administrator:

People who can perform other operations, except set advanced options and enroll administrators.

Supervisors:


People who have access to ALL functions.

Scroll with the $\blacktriangle/\blacktriangledown$ keys to choose the "authority status" of the Admin you are enrolling (i.e. Enroller, Admin or Supervisor).



Press the **OK** key after selecting "Admin

 type". The U160 will prompt you;




If this is a NEW "Admin", then press **OK**

If you are enrolling an <u>additional</u> fingerprint to an <u>existing</u> Admin on the U160, then press the **ESC** key



Note:

 
If you press **ESC**, the U160 will prompt you for the existing Admin's ID number;



Note:


The U160 allows you to add up to 9 "backup" fingers.

 In this first example we'll assume we're enrolling a fingerprint for a NEW Admin.



Since we are enrolling a New Admin, press OK

 The U160 will then prompt you with the next available User ID number;



In this example, no Admin has yet been enrolled on the U160, so the next available User ID# is <u>00001</u>.


Press the **OK** key to accept <u>00001</u>, or manually key in a different number if desired.

The U160 will then prompt;

New Enroll 00001-0 Place Finger . . . ESC/Exit

Remember the rules for proper finger placement;

The user's finger should completely cover the sensor. The finger should be placed flat and in the center of the sensor. The finger should cover at least 80% of the sensor as shown below:

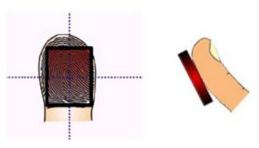

The finger should NOT be placed in the following positions:

Not flat

Not centered

Not centered

Not centered

Place your finger on the sensor for a full 2 seconds.



After the U160 scans your fingerprint successfully, it will "beep" and then prompt you briefly with;



Then you'll be prompted;



 
Remove your finger, and then place your finger on the sensor a 2nd time. Again, you'll be prompted briefly;

New Enroll 00001-1 Remove Finger ESC/Exit Remove your finger, and then place your finger on the sensor a 3rd and final time. You'll then be prompted;



Press the **OK** key to accept the newly enrolled

finger. The U160 will then prompt you with;




UserID <u>00001</u> has now been successfully enrolled with <u>one</u> fingerprint.

If you wish to continue enrolling additional Admins, press the **OK** key and follow the same procedures.

If you're finished enrolling additional Admins, press the **ESC**

 key. When pressing **ESC**, the U160 will prompt you;




If you wish to add a "backup finger" for UserID <u>00001</u> press the **OK** key.

Note:

Ideally, we recommend enrolling one finger from each hand so that in case of injury to one hand, the user can use the finger from the other hand as a backup. It is recommended to enroll either index fingers and/or middle fingers.

After enrolling one or more fingerprints to UserID <u>00001</u> press the **ESC** key.

 
You'll note pressing the **ESC** key takes you back to the previous menu;



Press **ESC**



 Press **ESC**



Continue pressing the **ESC** key until you return to the Start-Up window;



Note:

The actual current date/time will appear.

Test the newly enrolled fingerprint by having UserID $\underline{00001}$ place his/her finger on the sensor.

If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;



Note:

The U160 will make a note in its transaction log that User ID <u>00001</u> accessed the U160. This information can be used for Time & Attendance software applications.

 
Enroll Password (for Admins)

Password Enrollment should be used for those few Admins whose fingerprints cannot be read by the U160's fingerprint sensor.

To start Password enrollment, press the **MENU** key on the U160.




Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside User Manage




Press the **OK** key.

 Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Enroll Admin.




Press the **OK** key.

 Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Enroll Pwd.



Press the **OK** key.

 The U160 will prompt you;



Scroll with the $\blacktriangle/\blacktriangledown$ keys to choose the "authority status" of the Admin you are enrolling.

There are 3 types of "Admins" to choose from;

Enrollers

People who are authorized **ONLY** to **enroll** new users or delete users from the system. No other U160 "system" functions are accessible.

 
Administrator

People who can perform other operations, except set advanced options and enroll administrators.


Supervisors

People who have access to ALL functions

Scroll with the $\blacktriangle/\blacktriangledown$ keys to choose the "authority status" of the Admin you are enrolling.



 Press the **OK** key after selecting "Admin type".



If this is a NEW Admin, then press **OK**If you are adding/changing a password for an existing Admin on the U160, then press the ESC k



Note:

If you press **ESC**, the U160 will prompt you for the existing Admin's ID number;



In this first example we'll assume we're enrolling a password for a NEW Admin.



Since we are enrolling a New User, press **OK**

 
The U160 will then prompt you with the next available User ID;



In this example, no user has yet been enrolled on the U160, so the next available User ID# is <u>00001</u>.


Press the **OK** key to accept <u>00001</u>, or manually key in a different number if desired and then press **OK**

The U160 will then prompt;




Enter a 4-digit password and then press the **OK**

 
key. The U160 will prompt you;



 Re-enter the very same 4-digit password and then press the **OK** key. The U160 will then prompt you;



 Press the OK key. The U160 will then prompt you;




If you'd like to enroll a password for a new or existing Admin, then press **OK**.

If you'd like to change a password for an existing Admin, then press **ESC**

Follow the same procedure described above for adding/changing passwords.

 
You'll note pressing the **ESC** key takes you back to the previous menu;



Press **ESC**



 Press **ESC**



Continue pressing the **ESC** key until you return to the Start-Up window;



 
Note:

The actual current date/time will appear.

Test the newly enrolled password;

At the start-up window, have User ID <u>00001</u> **FIRST** enter his/her User ID number and **THEN** press the key.

After entering 1 and pressing **OK** the U160 will prompt;



Now enter the password created by User ID <u>00001</u> and then press **OK** If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;



Note:

The U160 will make a note in its transaction log that User ID 0001 accessed the U160. This information can be used for Time & Attendance software applications.

Enroll Fingerprint & Password (for Admins)

 
Note:

You can enroll Admins with both a fingerprint AND a password in the same step.

To start Fingerprint AND Password enrollment, press the $\overline{\text{MENU}}$ key on the U160.




Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside User Manage



Press the **OK** key.




 Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Enroll Admin.



Press the **OK** key.

 Scroll with the ▲/▼ keys and place the cursor (►) alongside FP & Pwd.



Press the **OK** key.

The U160 will prompt you;



Scroll with the $\blacktriangle/\blacktriangledown$ keys to choose the "authority status" of the Admin you are enrolling.

Recall, there are 3 types of "Admins" to choose from;

Enrollers

People who are authorized **ONLY** to **enroll** new users or delete users from the system. No other U160 "system" functions are accessible.

Administrator

People who can perform other operations, except set advanced option and enroll administrators.

 
Supervisors

People who have access to ALL functions

Scroll with the \triangle/∇ keys to choose the "authority status" of the Admin you are enrolling.



Press the **OK** key after selecting "Admin type" (i.e. Enroller, Admin or Supervisor)




If this is a NEW Admin, then press OK

If you are enrolling an <u>additional</u> fingerprint to an <u>existing</u> Admin, then press the **ESC** key.



Note:

 
If you press **ESC**, the U160 will prompt you for the existing User's ID number;



Note:


The $\,\mathrm{U}160\,\mathrm{allows}$ you to add up to 9 "backup" fingers for any of the users.

 In this first example we'll assume we're enrolling a fingerprint AND password for a NEW Admin to the U160.



Since we are enrolling a New Admin, press OK

 The U160 will then prompt you with the next available User ID number.



In this example, no user has yet been enrolled on the U160, so the next available User ID# is <u>00001</u>.


Press the **OK** key to accept <u>00001</u>, or manually key in a different number if desired.

The U160 will then prompt;

New Enroll 00001-0 Place Finger . . . ESC/Exit

Remember the rules for proper finger placement;

The user's finger should completely cover the sensor. The finger should be placed flat and in the center of the sensor. The finger should cover at least 80% of the sensor as shown below:

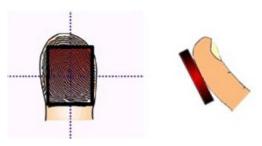

The finger should NOT be placed in the following positions:

Not flat

Not centered

Not centered

Not centered

Place your finger on the sensor for a full 2 seconds.



After the U160 scans your fingerprint successfully, it will "beep" and then prompt you <u>briefly</u> with;

 
New Enroll
00001-1
Remove Finger
ESC/Exit

Then you'll be prompted;

New Enroll 00001-1 Second Press ESC/Exit


Remove your finger, and then place your finger on the sensor a 2nd time. Again, you'll be prompted briefly;

New Enroll 00001-1 Remove Finger ESC/Exit Remove your finger, and then place your finger on the sensor a 3^{rd} and final time. You'll then be prompted;



Enter a 4-digit password and then press the **OK**

 
key. The U160 will prompt you;



Re-enter the very same 4-digit password and then press the **OK** key. The U160 will then prompt you;



 
Press the OK key. The U160 will then prompt you;



If you'd like to enroll an additional new Admin, then press **OK**.

If you're finished enrolling additional Admins, press the **ESC**

 key. When pres , the U160 will prompt you;




If you wish to add a "backup finger" for UserID <u>00001</u> press the **OK** key.

Note:

Ideally, we recommend enrolling one finger from each hand so that in case of injury to one hand, the user can use the finger from the other hand as a backup. It is recommended to enroll either index fingers and/or middle fingers.

After enrolling one or more fingerprints to UserID <u>00001</u> press the <u>ESC</u> key.

 
You'll note pressing the **ESC** key takes you back to the previous menu;



Press **ESC**



 Press **ESC**



Continue pressing the **ESC** key until you return to the Start-Up window;



Note:

The actual current date/time will appear.

Test the newly enrolled fingerprint by having UserID $\underline{00001}$ place his/her finger on the sensor.

If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;

 


Also test the newly enrolled password;



At the start-up window, have User ID <u>00001</u> **FIRST** enter his/her User ID number and **THEN** press the key.

After entering <u>1</u> and pressing **OK** the U160 will prompt;



Now enter the password created by User ID <u>00001</u> and then press **OK** If successful, the U160 will respond with an audible "*Thank you*", and the screen will display;



Note:

The U160 will make a note in its transaction log that User ID <u>00001</u> accessed the U160. This information can be used for Time & Attendance software applications.

Card Enrollment

Note:

Some U160 models have an internal card reader, in addition to a fingerprint sensor.

The U160 has the option of having an internal proximity card reader, HID reader or Mifare reader.

Card readers are helpful for users whose fingerprints cannot be read by the fingerprint sensor.

 
Mifare readers are helpful for customers who prefer not storing fingerprint templates on the reader. Instead, the templates are stored on the cards.

Proximity/PIN Card Enrollment

To start Proximity/PIN Card Enrollment", press the wigned key on the U160.




Scroll with the ▲/▼ keys and place the cursor (►) alongside User Manage



Press the **OK** key.




 Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside FPCard Mng.




Press the **OK** key.

 The U160 will prompt you with;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Create PINCard and press .

 The U160 will prompt you with;



Deleting Users

Note:

You can delete fingerprints, passwords or an entire user.

Deleting old/unused fingerprint templates makes room for new fingerprint templates.

 
Deleting may be necessary when:

- A user's fingerprint is no longer recognized (possibly caused by injury) or his/her password has been forgotten.
- The user is no longer employed and his/her fingerprint(s)/password and user information need to be deleted from the S900 for security purposes.

To perform Deletion, press the **MENU** key on the U160.




Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside User Manage



Press the **OK** key.



 Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Delete.



Press the **OK** key.

The U160 will prompt you with the Delete menu;



Enter the User ID whose information you'd like to delete. Then press

The U160 will then prompt;



Press **OK** to delete fingerprint <u>00001-0</u>.

 
If the user has additional fingerprints enrolled, the U160 will prompt you with the choice of deleting each individual fingerprint enrolled by the user (i.e. 00001-1, 00001-2, etc).

If the user also has a password enrolled, after deleting all the fingerprints for that particular user, the U160 will then prompt you with;



Press **OK** to delete the password.


The U160 will then prompt with;




If you're 100% positive you wish to delete this user, then press **OK**

If you change your mind, press the **ESC** key.

 Pressing either the **OK** key or **ESC** key returns you to the previous menu;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



Note:

The actual current date/time will appear.

117

Options

The Options Menu allows access to the following functions & settings;

System Options

Setting Date Time

Date format (i.e. YY-MM-DD)

Advanced Options

- Reset
- Delete Attendance/audit logs
- Clear All Data (templates and logs)
- Clear Admin privileges
- Show Score
- Match Threshold
- Must Input ID
- 1:1 Threshold (35)
- Voice
- Card Only
- FPCard key
- Update Firmware
- Button Beep

Advanced Options (cont.)

• Volume Adjustment

Power Management

Communications Options

- Ethernet
- RS 232/485

Logging Options

Auto Test

 
- LCD test
- Voice test
- FP reader
- Key test
- RTC test

Changing Date and Time

Press the **MENU** key on the U160.




Scroll with the **△**/**▼** keys and place the cursor (**▶**) alongside "Options"



Press the **OK** key.



 
The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside System Opt;

Press the **OK** key.

 
The following screen appears;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Date Time.

Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys to change either the year, month, day or time.

 
Use the keypad to change the current value(s).

Note:

Time is in military (24-hour) format.

Press the $\overline{\mathbf{OK}}$ key to accept changes, or the $\overline{\mathbf{ESC}}$ key to cancel and return to the previous menu.


Continue pressing the **ESC** key until you return to the Start-Up window;



Press ESC



 Press ESC



Press ESC



Note:

The actual current date/time will appear.

Changing Date Format

 
The following "date formats" are available;

YY.MM.DD MM-DD-YY MM/DD/YY MM.DD.YY DD-MM-YY DD/MM/YY DD.MM.YY YYYYMMDD

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Fmt. Press the \oode{OK} key.

 
Notice **YY-MM-DD** becomes highlighted. The screen now allows you to change the "format" of the date;



Use the scroll \triangle/∇ keys to change the date format.


Press the **OK** key to accept changes.

 Notice the date format YY-MM-DD will no longer be highlighted and you're free again to scroll through the menu.




Press the **ESC** key when finished.

 You'll then be prompted;




Press the $\overline{\mathbf{OK}}$ key to accept changes, or the $\overline{\mathbf{ESC}}$ key to cancel and return to the previous menu.

 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press **ESC**



Note:

The actual current date/time will appear.

Advanced Settings

The following Advanced Settings are available;

Reset Opts:

Restores all default factory settings.

Does NOT delete user fingerprints/passwords or transactions/audit logs.

Del Att Logs:

Clears attendance/transaction log but NOT user fingerprints/passwords.

Clear all Data:

Deletes BOTH user data and tattendance/audit log.

Clr Admin Pri:

Change the rights of ALL administrator(s) to a normal user.

Show Score:

Display the score of the quality of the fingerprint match.

1:N Fingerprint Match Threshold:

Changes fingerprint-matching "sensitivity"

Must Input ID:

Disable 1:N matching (users MUST first enter user ID number prior to placing finger on sensor)

1:1 Fingerprint Match Threshold

Changes fingerprint-matching "sensitivity"

Voice

Option to turn voice prompts "on" or "off"

Card Only

Users clock-in ONLY with cards

FPCard Key

Enter Mifare card key

Update Firmware

Allows updating of U160 firmware Button

Beep

Option to turn audio beep "on" or "off"

Adjust Volume

Resetting U160

 
Note:

Resetting will erase system changes, but will NOT erase users' fingerprints/passwords nor attendance/audit logs.

Press the **MENU** key on the U160.




Scroll with the **△**/**▼** keys and place the cursor (**▶**) alongside Options






The Options Menu will appear;

 

Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 The Advanced Options menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Reset Opts.

Note:

 
You will NOT be prompted whether you wish to proceed or cancel!

Once you press **OK**, all system changes will be erased and the U160's original factory settings will replace any changes you may have made.


However, all user data and attendance/audit logs will remain unchanged.

Press the **OK** key if you wish to erase all system


changes. The U160 will prompt;



The Advanced Options menu will return;

 

 
Continue pressing the **ESC** key until you return to the Start-Up window;



Press ESC



 Press **ESC**



Press ESC

Welcome Check-In
HH:MM
MM/DD/YY DAY

Note:

The actual current date/time will appear.

Deleting Attendance/Audit Logs:

 
Note:

Although ALL the attendance/audit logs will be deleted, users' fingerprints and passwords are NOT deleted during this operation.

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 The Advanced Options menu will returns;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Del Attlogs.

 
Press the **OK** key if you wish to erase all the attendance/audit logs.

The U160 will prompt;




Press the **OK** key to accept or **ESC** to cancel.


The Advanced Options menu returns;



 
Continue pressing the **ESC** key until you return to the Start-Up window;



Press ESC

 

Press **ESC**

 

Press ESC



Note:

The actual current date/time will appear.

Clear all Data

 
Note:

ALL user fingerprints, passwords AND attendance/audit logs will be deleted.

Press the **MENU** key on the U160.



Scroll with the **△**/**▼** keys and place the cursor (**▶**) alongside Options






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (►) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Adv Option

 The Advanced Options menu will appear;



Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Clear All Data.

 
Press the **OK** key if you wish to erase all users' fingerprints, passwords and attendance/audit logs.

The U160 will prompt;




Press the **OK** key to accept or **ESC** to cancel.


The Advanced Options menu will return;



 
Continue pressing the **ESC** key until you return to the Start-Up window;



Press ESC

 

Press **ESC**

 

Press ESC



Note:

The actual current date/time will appear.

Clear Administrators' Privileges

Note:

 
This option will revoke all "Administrative authority" from Admins and convert them to "normal users".

This function gives ALL "users" unrestricted access to the U160's menu system. Therefore we strongly suggest converting a previously enrolled Admin BACK to an Admin as soon as possible".

Press the **MENU** key on the U160.




Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;

 

Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Clear Admin Pri.


Press the **OK** key if you wish to revoke "Administrative privilege" to all Admins and convert them to normal "users".

 The U160 will prompt;




Press the **OK** key to accept or **ESC** to cancel.

 
The Advanced Options menu will return;



 
Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press **ESC**

 

Press **ESC**



Note:

The actual current date/time will appear.

Show Score

 
Note:

Display the score of the quality of the fingerprint match.

Press the **MENU** key on the U160.




Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;






The Options Menu will appear;

 

Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 The Advanced Options menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Show Score.

 
Press the **OK** key.

Notice the Y / N in Show Score becomes highlighted;

Use the scroll $\blacktriangle/\blacktriangledown$ keys to enter either Yes or No.


Press the **OK** key after making the necessary change.

Notice, \mathbf{Y} / \mathbf{N} will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Welcome Check-In HH:MM MM/DD/YY DAY

Note:

The actual current date/time will appear.

1:N Fingerprint Match Threshold

 
Note:

This feature allows you to change the sensitivity of the fingerprint sensor when performing 1:N (many) fingerprint matching.

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Match Thr.

Press the **OK** key.

 Notice the 45 in Match Thr becomes highlighted;



Use the keypad or scroll **△**/**▼** keys to change the threshold setting.

Lessening the threshold lessens the sensitivity of the sensor when reading "difficult" fingerprints.

If the U160 is having difficulty reading most users' fingerprints, then consider lessening the threshold in 5-unit increments until the vast majority of users' fingerprints can be read consistently.


If lessening the threshold doesn't help improve "fingerprint reads", consider issuing PIN numbers or cards for those users having difficulty having his/her fingerprints read by the U160.

Table 1—1 Suggested Match Threshold Settings

FRR	FAR	1:N (Many)	1:1
High	Low	45	25
Middle	Middle	35	15
Low	High	25	10

After changing the threshold, press the **OK** key.

 Notice, the Match Threshold Number 45 will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

The U160 will prompt;




Press **OK** again.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press ESC



Note:

Must Input ID

Note:

 
This feature disables 1:N Fingerprint Matching and places the U160 in 1:1 Fingerprint Matching mode.

Although <u>1:1</u> Fingerprint Matching requires the extra step of FIRST entering a user's ID number prior to scanning his/her finger, <u>1:1</u> Fingerprint Matching is more consistent than 1:N (many) fingerprint matching.

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Mst Input ID.

Press the **OK** key.

 
Notice the Y or N for Mst Input ID becomes highlighted;



Use the scroll \triangle/∇ keys to enter either Yes or No.


Press the **OK** key after making the necessary change.

 Notice, \overline{Y} or \overline{N} will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press **ESC**



Note:

1:1 Fingerprint Match Threshold

Note:

This feature allows you to change the sensitivity of the fingerprint sensor when performing **1:1 fingerprint matching**.

Press the **MENU** key on the U160.

 


Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.

Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside 1:1 Thr.

Press the **OK** key.

Notice the 35 in Match Thr becomes highlighted;



Use the keypad or scroll $\blacktriangle/\blacktriangledown$ keys to change the threshold setting.

Note:

Lessening the threshold lessens the sensitivity of the fingerprint sensor.

If the U160 is having difficulty reading most users' fingerprints, then consider lessening the threshold in 5-unit increments until the vast majority of users' fingerprints can be read consistently.

If lessening the threshold doesn't help improve "fingerprint reads", consider issuing PIN numbers or cards for those users having difficulty having his/her fingerprints read by the U160.

Table 1—1 Suggested Match Threshold Settings

FRR	FAR	1:N (many)	1:1
High	Low	45	25
Middle	Middle	35	15
Low	High	25	10

After changing the threshold, press the **OK** key.

Notice, the Match Thr number **35** will no longer be highlighted and you're free again to scroll through the menu;


Adv Option	A
	▼
Match Thr	45
Mst Input ID	Y
▶1:1 Thr	35

Press **OK** again.

The U160 will prompt;

Press **OK** again.

 
The System Options menu will return;



Continue pressing the **ESC** key until you return to the Start-Up window;



 Press **ESC**



Press **ESC**



Note:

Voice

 
Note:

This option allows you to turn voice prompts "on" or "off".

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (►) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Voice.

Press the **OK** key.

 
Notice the Y or N for Voice becomes highlighted;



Use the scroll \triangle/∇ keys to enter either Yes or No.


Press the **OK** key after making the necessary change.

 Notice, Voice \overline{Y} or \overline{N} will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press **ESC**



Note:

Card Only

Note:

 
Users can clock-in ONLY with his/her issued card.

All fingerprints and passwords will be disabled (but not deleted).

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Card Only.

Press the **OK** key.

 
Notice the Y or N for Card Only becomes highlighted;



Use the scroll \triangle/∇ keys to enter either Yes or No.


Press the **OK** key after making the necessary change.

 Notice, Card Only $\overline{\mathbf{Y}}$ or $\overline{\mathbf{N}}$ will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press ESC



Note:

FPCard Key

 
Note:

Enter **F**inger**p**rint Card Key (also known as Mifare card key).

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.



 
The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.

Press the **OK** key.


The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

Press the **OK** key.

 The Advanced Options menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside FPCard Key.

Press the **OK** key.

 
Notice FPCard Key becomes highlighted;




Use the keypad or scroll $\blacktriangle/\blacktriangledown$ keys to enter the FPCard Key.

After entering the Key, press **OK**.

The Adv Option menu will return;



 
Continue pressing the **ESC** key until you return to the Start-Up window;



Continue pressing the **ESC** key until you return to the Start-Up window;



 Press ESC



Press **ESC**



Note:

Update Firmware

Note:

 
Update the firmware of the U160 by utilizing the USB Pen Drive (flash drive).

Caution: Only change the firmware under the guidance of your dealer or ZK Software Tech Support.

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside System Opt.

Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Adv Option.

 
The Advanced Options menu will appear;



Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside Upd Firmware.

Press the **OK** key.

You'll then be prompted;




Insert the USB Pen Drive (flash drive) containing the Upgrade file into the USB port of the U160.


The U160 will automatically recognize the upgraded firmware/file and will prompt you with instructions.

When complete press the **OK** key.

 
The Adv Option menu will return;



 
Continue pressing the **ESC** key until you return to the Start-Up window;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press ESC



Note:

Button Beep

 
Note:

You can turn the audio **beep** "on" or "off" when pressing the U160 keypad.

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.



 
The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (►) alongside System Opt.

Press the **OK** key.

The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Adv Option.

Press the **OK** key.

 
The Advanced Options menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Button Beep.

Press the **OK** key.


Notice the Y or N for Button Beep becomes highlighted;



Use the scroll \triangle/∇ keys to enter either Yes or No.


Press the **OK** key after making the necessary change.

 Notice, Button Beep \mathbf{Y} or \mathbf{N} will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press ESC

 

Press ESC



Note:

Adjust Volume

Press the **MENU** key on the U160.



 
Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.




The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside System Opt.

Press the **OK** key.

 
The following screen appears;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Adv Option.


Press the **OK** key.

 The Advanced Options menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Adj VOL.

 
Notice the 70 in Adj VOL becomes highlighted;



Use the keypad or scroll \triangle/∇ keys to adjust the volume.


After changing the volume, press the **OK** key.

 Notice, the Volume % **70** will no longer be highlighted and you're free again to scroll through the menu;




Press **OK** again.

 The U160 will prompt;




Press **OK** again.

 
The System Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**

 

Press ESC



Note:

Power Management

There are various power modes which can be selected;

Shut down schedule:

Turn off the power at pre-defined times.

Power on schedule:

Turn on the power at pre-defined times.

Sleep schedule:

Enable sleep mode at pre-defined times. Press any key to bring the U160 out of sleep mode.

Idle

This setting determines if the U160 should remain **idle** indefinitely or if it should enter "Sleep Mode" after a specified period of time.

Idle Minute:

This setting determines how long the U160 can remain "idle" prior to entering "sleep mode".

 
Lock Power (Yes or No)

Set Shutdown Schedule

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;





The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Power Mng.

Press the **OK** key.

The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Shutdown.

You'll then be prompted;



Press the **OK** key to schedule the Shutdown Function.

 
Notice the 23:59 in Shutdown becomes highlighted;



Use the scroll $\blacktriangle/\blacktriangledown$ keys and keypad to change the **hour** and **time** the U160 should **Shutdown**.


Press the **OK** key after making the necessary change.

Notice the **23:59** in Shutdown will no longer be highlighted and you're free again to scroll through the menu;



Press the **ESC** key.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



 
Note:

Set Power On Schedule

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;





The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Power Mng.

Press the **OK** key.

The following screen appears;



 
Scroll with the ▲/▼ keys and place the cursor (▶) alongside PowerOn.

You'll then be prompted;



Press the **OK** key to schedule the PowerOn Function.


Notice the 23:59 in PowerOn becomes highlighted;



Use the scroll $\blacktriangle/\blacktriangledown$ keys and keypad to change the **hour** and **time** the U160 should **Power On**.


Press the **OK** key after making the necessary change.

 Notice the **23:59** in PowerOn will no longer be highlighted and you're free again to scroll through the menu;




Press the **ESC** key.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

 The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



 
Note:

Set Sleep Schedule

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;






The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Power Mng.

Press the **OK** key.

 The following screen appears;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Sleep.

You'll then be prompted;



Press the **OK** key to schedule the Sleep Function.

 
Notice the 23:59 in Sleep becomes highlighted;



Use the scroll $\blacktriangle/\blacktriangledown$ keys and keypad to change the **hour** and **time** the U160 should **Sleep**.


Press the **OK** key after making the necessary change.

Notice the **23:59** in Sleep will no longer be highlighted and you're free again to scroll through the menu;



Press the **ESC** key.

 The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



 
Note:

Set Idle to Off or Sleep

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Power Mng.

Press the **OK** key.

 The following screen appears;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Idle.

Notice the 23:59 in Sleep becomes highlighted;



Use the scroll $\blacktriangle/\blacktriangledown$ keys to change the **Idle** mode to **Sleep** or **Off**.

 
Press the **OK** key after making the necessary change.

Notice the **SLP/OFF** in Idle will no longer be highlighted and you're free again to scroll through the menu;



Press the **ESC** key.

The U160 will prompt;



Press **OK** to accept or press **ESC** to cancel.

The Options menu will return;

207



Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



 
Note:

Set Idle Minutes

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;





The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Power Mng.

Press the **OK** key.

The following screen appears;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Idle Min.

Notice the 0 in Idle Min becomes highlighted;



Use the scroll \triangle/∇ keys to change the **Idle Minutes**.

 
Press the **OK** key after making the necessary change.

Notice the **0** in Idle Minutes will no longer be highlighted and you're free again to scroll through the menu;



Press the **ESC** key.

The U160 will prompt;




Press **OK** to accept or press **ESC** to cancel.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



 
Note:

Lock Power

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options;






The Options Menu will appear;



Scroll with the ▲/▼ keys and place the cursor (▶) alongside Power Mng.


Press the **OK** key.

 The following screen appears;



Scroll with the ▲/▼ keys and place the cursor (►) alongside Lock Power.

 Notice the Y in Lock Power becomes highlighted;



Use the scroll \triangle/∇ keys to change the **Y** or **N** in **Lock Power**.

 
Press the **OK** key after making the necessary change.

Notice the \mathbf{Y} in Lock Power will no longer be highlighted and you're free again to scroll through the menu;



Press the **ESC** key.

The U160 will prompt;




Press $\overline{\textbf{OK}}$ to accept or press $\overline{\textbf{ESC}}$ to cancel.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window;



Press **ESC**



Note:

Communication Options

Note:

The U160 can communicate via the Network (Ethernet) or RS 232/485.

Press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.






The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Comm Opt.

Press the **OK** key.

The following communication settings are available;

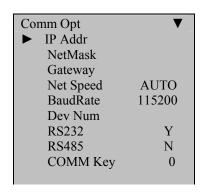

Network (Ethernet) Connectivity

The following settings are available:

Machine IP address:

Default IP is 192.168.1.201. This can be modified, but do NOT use an IP address already being used by another device on the same network

Subnet mask:

 
Default mask 255.255.255.0. This can be modified.

Gateway address:

Default gateway address is 0.0.0.0. This can be modified.

Network speed:

Notice three available options (Automatic, 10M and 100M).



To change Network settings begin at start-up and press the **MENU** key on the U160.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.



 
The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Comm Opt.

Press the **OK** key.

The following Network Communication settings are available;




Scroll with the \triangle/∇ keys to place the cursor in the desired field and change the communication setting as desired.

Press **OK** after modifying the desired communication settings.

When finished, press the **ESC** key.

 You'll be prompted;




Press **OK** again.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window.



Press **ESC**



Note:

RS232/485 Serial Connectivity

The following settings are available;

Baud rate:

Choose either 9600, 19200, 38400, 57600, 115200.

RS232

Enable or disable RS 232 communication.

RS485:

Enable or disable RS 485 communication.

COMM Key:

Secure the Serial connection with a Key (password). The default value is set to 0.

Dev Num:


Assign each U160 a unique Device Number ranging from 1-255. This device number is also the <u>site code</u> if the U160 is using a Wiegand communication protocol with a 3rd party access control panel.

Comm Opt	▼
► BaudRate	115200
Dev Num	
RS232	Y
RS485	N
COMM Key	0

To change RS 232/485 settings begin at start-up and press the **MENU** key on the U160.



 Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.



 
The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Comm Opt.

Press the **OK** key.

The following RS 232/485 Communication settings are available;




Scroll with the \triangle/∇ keys to place the cursor in the desired field and change the communication setting as desired.

Press **OK** after modifying desired communication settings.

When finished, press the **ESC** key.

 You'll be prompted;




Press **OK** again.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window



Press **ESC**



Note:

Log Options

The U160 has 3 logging options:

Alarm Superlog:

Alarm Attendance Log:

When the number of transactions reaches a set value a warning alarm will be sounded to clear the memory,

Recheck Minute:

This can be set to avoid record duplicate punches. For eg. If this value is set as 2, then it will not record the transaction of the same user ID within 2 minutes of the first punch.



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.



The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Log Opt.

Press the **OK** key.

The following screen appears;







 
Scroll with the ▲/▼keys to place the cursor in the desired field.

Press **OK** and modify your desired settings.

Enter your preferred Serial communication settings.

When finished, press the **ESC** key


You'll be prompted;



Press **OK** again.

The Options menu will return;

 229



Continue pressing the **ESC** key until you return to the Start-Up window.



Press **ESC**



Note:

The actual current date/time will appear.

Auto Test

This menu allows you to test various components of the U160;

Run ALL Tests

LCD Test

Does the display appear normal?

Voice Test

Scroll through and listen to pre-recorded voice prompts by pressing the **OK** key.

Fingerprint Reader

Does the display indicate the fingerprint reader is OK?

Key Test

Does each key pressed on the keypad correctly coincide with the key displayed on the screen?

Real Time Clock (RTC) Test

Does the display indicate the RTC is OK?



 
Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Options.



Press the **OK** key.




The Options Menu will appear;



Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Auto Test.

Press the **OK** key.

The following screen appears;

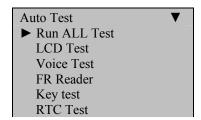


Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside the feature you'd like to test and press the \widecheck{OK} key.

After testing, press the **ESC** key.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window.



Press **ESC**



Note:

The actual current date/time will appear.

PenDrive (Flash Drive) Management

Note:

This feature allows you to manually upload and download data (i.e. templates, attendance records/transaction logs and pictures/images) between the U160 and the USB PenDrive/flash drive.

Download Attlog/Record

Copies attendance records/audit logs <u>from</u> the U160 <u>to</u> the PenDrive.

Download User

 
Copies users' info (inc. templates) $\underline{\text{from}}$ the U160 $\underline{\text{to}}$ the PenDrive.

Upload User

Copies users' info $\underline{\text{from}}$ the PenDrive $\underline{\text{to}}$ the U160.




Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside PenDrive Mng



Press the **OK** key.



 The PenDrive Mng Menu will appear;



Upload User

Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside the desired PenDrive option.

Be sure the USB PenDrive (flash drive) is inserted in the USB port of the $\,$ U160.

Press the **OK** key.

The U160 will prompt;

Plug Pen Drive?

Follow the prompts to upload/download data.

The following files are copied to the PenDrive:

- **X_attlog.dat** (attendance log)
- **X_oplog.dat** (management log)
- **X_user** (User info including templates)

Note:

The "x" represents the machine number of the U160 where the data originated.

 
System Information

This menu allows you to review various systems on the U160;

- Number of users enrolled
- Number of fingerprints enrolled
- Number of entries in the attendance/audit log
- Number of Admins (inc Enrollers & Supervisors) enrolled
- Number of passwords enrolled
- Number of S Logs
- Amount of free space available;
 - o Available fingerprint entries
 - o Available attendance log entries
 - o Available S Log entries
- Device Info




Scroll with the \triangle/∇ keys and place the cursor (\triangleright) alongside Sys Info.



Press the **OK** key.



The Sys Info screen will appear;

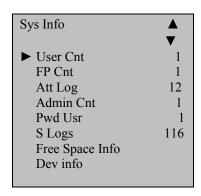


Scroll with the $\blacktriangle/\blacktriangledown$ keys and place the cursor (\blacktriangleright) alongside the system information you'd like to review, and then press the \widecheck{OK} key.

After reviewing, press the **ESC** key.

The Options menu will return;



 Continue pressing the **ESC** key until you return to the Start-Up window.



Press **ESC**



Note:

The actual current date/time will appear.

Maintenance

Cleaning

From time to time, the optical platen, the keypad and display window require cleaning. Since working environments differ, it is not possible to define when exactly cleaning should be performed.

The following is a suggested guide:

show reigibles dieter and hand to mand
hen visibly dirty and hard to read.
over clean. The platen is designed to work reasy or dirty conditions. er, do clean if the platen is obscured or if port deteriorating performance. See g the Optical Platen below.

Cleaning the Keypad and Display

To clean the keypad and display, use a soft paper tissue which should be slightly damp.

Cleaning the Optical Platen

- If dusty, blow air on the platen to clean any dust particles.
- If the sensor is greasy, wipe it with a mild window cleaner or other similar neutral detergent.

Warning:

Do not use any other cleaner or the platen may be damaged. Be careful not to scratch the platen.